


Installation 3/8" Stainless Steel Wedge Anchor Bolts

Ritchie Part No.: 16555 ANCHOR BOLT PACKAGE 3/8 X 5" STAINLESS STEEL (2/PKG)

14261 ANCHOR BOLT PACKAGE 3/8 X 3 1/2" STAINLESS STEEL (2/PKG)

1. Drill hole into the concrete using a carbide tipped bit. Bit size = 3/8" (same as anchor diameter) Drill the hole through the concrete or at least 1/2" deeper than the length of the anchor.
2. Clean out the hole using a wire brush, compressed air, vacuum, blow out bulb or other method.
3. Put the nut and washer onto the wedge anchor and make sure that the nut is on the last threads (this will protect the threads from damage when the wedge anchor is hammered into the hole in the concrete).
4. Insert the wedge anchor through the base hole and into the hole in the concrete pad. This should be a very tight fit- use a hammer to complete the installation until the nut and washer are tight against the base.
5. Turn the nut clockwise, until finger tight.
6. Using a wrench, turn the nut 3-4 times until snug. Do not overtighten or damage may occur to base of unit.

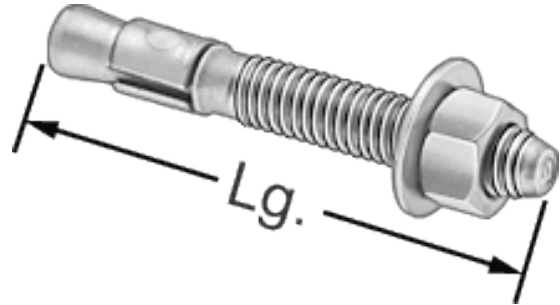

24140
11/19/2019